
# 8 Ports PoE Ethernet Switch

VerB 1.0

8 ports PoE Ethernet Switch is a surveillance security Ethernet switch which aims at Ethernet high definition surveillance, Ethernet project security system. The product fully combines the characteristic of surveillance security, provides fast packet forwarding ability and abundant backplane bandwidth, which ensures clear image and fluent transmission. Inserted static, surge protection circuit can improve product stability. The product supports one key CCTV model, can achieve VLAN, QoS priority after configuration, control the Net storm, protect the information security, prevent the viral transmission and Ethernet attack, fully satisfy the Ethernet video surveillance security system and Ethernet project needs.

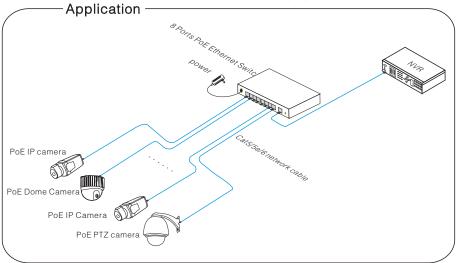

#### **■**Feature


- Major ports: 1 pc 100Mbps up link Ethernet port, 8 pcs 100Mbps down link Ethernet ports, every port supports MDI/MDIX;
- Special function: One key CCTV model;
- Power input: DC48V ~ 57V;
- Transmission Distance: 0 ~ 100m:
- Standard: Meet IEEE802.3, IEEE802.3u, IEEE802.3 af/at standards,
  - PoE use End-Span, the spare cable can be of other use;
- Protection: Excellent anti-thunder, anti-static and anti-interference ability;
- Appearance: Delicate design and easy installation, configure the anti-theft lock hole, guard against theft;
- Operation: Plug and Play, No Setting required.



The transmission distance is related to the connected cable. We suggest standard Cat5e/6 network cable, so the transmission distance can up to 100m!

#### ■ 8 Ports PoE Ethernet Switch

## **■**Board Diagram

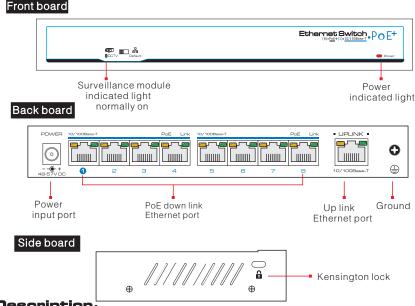

## Description:

- 1) The equipment must connect the ground according to the request.
- 2) Turn the dial switch for left, the equipment can enter surveillance module after providing equipment power.

### Installation steps

Please check the following items before installation, if it is missing, please contact the dealer.

<ul><li>8 ports PoE Ethernet Switch</li></ul>	1pc
<ul><li>Power adaptor</li></ul>	1pc
<ul><li>AC power cable</li></ul>	1pc
<ul><li>Accessory</li></ul>	1set
■ User manual	1set

#### Please follow below the installation steps

- 1) Please turn off the signal power and display device power before installation, installation with power will damage the transmission equipment;
- 2) Use network cable connect IP camera and 1 ~ 8 down link ports of product respectively;
- 3)Use a network cable connect equipment up link port and NVR or computer;
- 4) Turn on the power of the equipment;
- 5) Check if the installation is correct, equipment is in good condition, the connection is stable, then provide power for system;
- 6) Ensure the Ethernet equipment with power and work properly

## **■** Specification

Item		Description	
Model		8 Ports PoE Ethernet Switch	
Power	Power Supply	Power Adaptor Input	
	Voltage Range	DC48V-57V	
	Consumption	The Equipment<5W,PoE output<120W	
Ethernet	Ethernet Port	1-8 Ethernet Port: 10/100Mbps	
		Uplink Port: 10/100Mbps	
	Transmission Distance	Down Link Port:0-100m	
		Uplink Port:0-100m	
Network Switch	Ethernet Standard	Support IEEE802.3/802.3u/802.3x/802.1p/802.1q/IEEE802.3	
		af/at	
	Backplane Bandwidth	1.8G	
	Packet Forwarding Rate	1.34Mbps	
	Packet Buffer	768k	
	MAC	2k	
Status Indicator	Power Light	1 pc(red)	
	Ethernet Port Light	RJ45port 2 pcs yellow Indicates PoE, green Indicates Act	
	Surveillance Module Light	1 pc( green)	
Protection Level	Pluse Group	Level 2	
		Standard:IEC61000-4-4	
	ESD	1a Contact Discharge Level 2	
		1b Air Discharge Level 2	
		Standard: IEC61000-4-2	
	Anti-thunder Level	Level 2	
		Standard : IEC61000-4-5	
Working Environment	Working Temperature	<b>-</b> 10°C ~ 55°C	
	Storage Temperature	<b>–</b> 40°C ~ 75°C	
	Humidity(Non-condensing)	0 ~ 95%	
Mechanical	Dimension(L*W*H) Include Port	200mm*105mm*27mm	
	Out She <b>ll</b>	Galvanized Sheet	
	Color	Black	
	Weight	500g	
Stablity	MTBF	≥50000h	

Specification change will not be noticed

#### ■ Trouble Shooting

Please follow the steps if the equipment has trouble.

- Make sure the equipment is installed according to the manufactures installation guide.
- Confirm RJ45 cable order meets EIA/TIA568A or 568B standard.
- Every PoE port can provide PoE equipment maximum power less than 30W, please do not connect the PoE equipment with power over 30W.
- Replace the equipment that can not work with a proper functioning 8 ports PoE Ethernet switch to check if the equipment is damaged.
- Please contact your vendor if trouble still exists.

#### ■ Plug Producing Method

Instruments to be used: wire crimper, network tester. Wire sequence of RJ45 plug should conform with EIA/TIA568A or 568B.

- 1) Please remove 2cm long the insulating layer, and bare 4 pairs UTP cable;
- 2) Separate the 4 pairs UTP cable and straighten them;
- 3) Line up the 8 pieces of cables per EIA/TIA 568A or 568B;
- 4) Cut off the cables to leave 1.5cm bare wire;
- 5) Plug 8 cables into RJ45 plug, make sure each cable is in each pin;
- 6) Use the wire crimper to crimp it;
- 7) Repeat above 5 steps to make the another end;
- 8) Using network tester to test the cable if it works.









EIA/TIA 568A



EIA/TIA 568B

When choose RJ45 make sure if one end is EIA/TIA568A, the other end should also be EIA/TIA568A. When choose RJ45 make sure if one end is EIA/TIA568B, the other end should also be EIA/TIA568B.